



XP-452La PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	11001656	Main body assy	701	17010079	Drive gear shaft assy
105	11050006	Worm shaft bushing	702	17020322	Pinion gear
105-1	11050007	Worm shaft bushing	703	17030005	Worm shaft guard
117	11170012	Retainer nut	704	17040037	Line guide support bar
200	12001185	Handle side plate	705	17050013	Transmission gear
201	12010088	Anti-re pawl	707	17070004	Transmission gear
207	12070090	Holded plate	710	17100059	Line guide assy.
208	12080076	Side plate cover	712	17120021	Worm shaft
211	12110021	Anti-re pawl pin	713	17130002	Line guide pawl cap
215	12150015	Hold plate bushing	715	17150009	Line guide pawl
216	12160001	Anti-re pawl spring	800	18000014	Clutch shaft
300	13001002	Vice side plate	801	18010007	Clutch spring
302	13020002	Washer	802	18020015	Clutch bar
302-3	13020015	Washer	804	18040001	Clutch slider
303	13030005	Click button	805	18050001	Pinion gear yoke
304	13040001	Click pawl	806	18060001	Yoke spring
305	13050007	Click pawl spring	29000001	29000001	E retainer
311	13110072	Side plate covers	29000006	29000006	C retainer
400	14000429	Spool assy.	0910227	0910227	Ball bearing
401	14010052	Spool click gear	0910248	0910248	Ball bearing
500	15000467	Handle assy.	0920157	0920157	Washer
516	15160002	Handle nut retainer	0920076	0920076	Washer
600	16000038	Cast control cap	0920166	0920166	Washer
609	16090004	Drag spring washer	0920066	0920066	Washer
610	16100038	Drag washer	0920283	0920283	Washer
610-1	16100045	Drag washer	0930226	0930226	Screw
611	16110006	Eared washer	0930900	0930900	Screw
612	16120027	Key washer	0930651	0930651	Screw
612-1	16120029	Key washer	0930732	0930732	Screw
614	16140003	Drag washer	0930609	0930609	Screw
615	16150021	Star darg	0930196	0930196	Screw
617	16170023	Drive gear shaft bushing	0930219	0930219	Screw
617-1	16170018	Drive gear shaft bushing	0930202	0930202	Screw
618	16180002	Washer	0930614	0930614	Screw
700	17000200	Drive gear	0940025	0940025	O ring