



EPL-20 PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21004569	Main body	700	27000420	Drive gear
105	21056616	Pinion bearing fixed bushing	702	27020948	Pinion gear
105	21050123	Pinion bearing fixed bushing	705	27050218	Transmission gear
112	21120203	Foot label decoration	705	27050217	Transmission gear
200	22004653	Side plate	708	27080189	Oscillating slider
201	22011088	Main body decoration	716	27160035	Oscillation slider plate
201	22011089	Side plate decoration	718	27180801	Main shaft
201	22011090	Main body decoration	719	27190025	Click gear
201	22011091	Side plate decoration	722	27220009	Click gear washer
300	23005219	Rotor	725	27250033	Transmission gear bushing
301	23012343	Bail arm	800	28000437	Anti-reverse/anti-re lever
304	23042879	Bail arm cover	800	28000402	Anti-reverse/anti-re lever
305	23050232	Kick lever	801	28010024	Anti-re lever spring
307	23071901	Bail holder	0910618	0910618	One way assy.
309	23090051	Bail arm support pin	0910018	0910018	Ball bearing
310	23100090	Compression spring	0910051	0910051	Ball bearing
313	23131876	Bail wire assy.	0910041	0910041	Ball bearing
315	23150086	Line roller	0910221	0910221	Ball bearing
316	23160014	Line roller bushing	0920373	0920373	Washer
317	23170014	Line rollerwasher	0920600	0920600	Washer
318	23180005	Rotor nut	0920136	0920136	Washer
320	23200122	Rotor balance weight	0920590	0920590	Washer
400	240016039	Spool assy.	0920235	0920235	Washer
405	24050042	Drag washer retainer	09301216	09301216	Screw
407	24070009	Extension spring	0930541	0930541	Screw
412	24120021	Spool bushing	09301525	09301525	Screw
412	24120038	Spool bushing	09301530	09301530	Screw
500	25006544	Handle assy.	0930438	0930438	Screw
504	25040007	Handle screw cap washer	09301327	09301327	Screw
513	25130920	Handle cap	09301470	09301470	Screw
600	26004365	Drag knob assy.	09301468	09301468	Screw
610	26100011	Drag washer	09301454	09301454	Screw
612	26120006	Key washer	0930431	0930431	Screw
612	26120054	Key washer	09301072	09301072	Screw