



RVP-80 PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21004150	Main body	708	27080069	Oscillating slider
102	21020001	Bushing	716	27160010	Oscillation slider plate
200	22004389	Side plate	718	27180614	Main shaft
201	22010662	Main body decoration	719	27190005	Click gear
300	23004984	Rotor	722	27220005	Click gear washer
301	23012057	Bail arm	725	27250019	Transmission gear bushing
304	23042726	Bail arm cover	800	28000256	Anti-reverse/anti-re lever
305	23050209	Kick lever	800-1	28000327	Anti-reverse/anti-re lever
307	23071753	Bail holder	801	28010039	Anti-re lever spring
309	23090037	Bail arm support pin	804	28040036	Anti-re lever pin
310	23100091	Compression spring	808	28080043	Ratchet
313	23131682	Bail wire	809	28090023	Silent spring
314	23141069	Bail nut	0910182	0910182	Ball bearing
315	23150010	Line roller	0920209	0920209	Washer
318	23180033	Rotor nut	0920168	0920168	Washer
400	240015121	Spool assy.	0920169	0920169	Washer
405	24050031	Drag washer retainer	0930451	0930451	Screw
500	25005937	Handle assy.	0930574	0930574	Screw
513	25130851	Handle cap	0930561	0930561	Screw
515	25150005	Handle screw cap washer	09301001	09301001	Screw
600	26003728	Drag knob assy.	0930470	0930470	Screw
610	26100055	Drag washer	09301397	09301397	Screw
611	26110019	Eared washer	0930665	0930665	Screw
612	26120046	Key washer	0930967	0930967	Screw
612-2	26120047	Key washer	0930215	0930215	Screw
700	27000424	Drive gear	0930826	0930826	Screw
702	27020809	Pinion gear	0930662	0930662	Screw
705	27050073	Transmission gear			